

688.016 **TOASTER** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-6ATS-001	POWER CORD	1
2	Z-6ATS-002	POWER CORD JACKET	1
3	Z-6ATS-003	BODY	1
4	Z-6ATS-004	HANDLE KNOB	1
5	Z-6ATS-005	SHAFT	1
6	Z-6ATS-006	SHAFT SPRING	1
7	Z-6ATS-007	RACK WELDING	1
8	Z-6ATS-008	SELECTOR SWITCH	1
9	Z-6ATS-009	TIMER	1
10	Z-6ATS-010	SET SCREW FOR TIMER	2
11	Z-6ATS-011	TIMER KNOB	1
12	Z-6ATS-012	SET SCREW FOR DECORATED BOARD	2
13	Z-6ATS-013	SET COVER FOR DECORATED BOARD	2
14	Z-6ATS-014	DECORATED BOARD	1
15	Z-6ATS-015	HEATING ELEMENT	5
15	Z-6ATS-015A	HEATING ELEMENT	2
16	Z-6ATS-016	CONNECTION TERMINAL	3
17	Z-6ATS-017	FLAT WASHER	28
18	Z-6ATS-018	SPRING WASHER	14
19	Z-6ATS-019	CROSS RECESS HEAD SCREW	14
20	Z-6ATS-020	HEXAGONAL NUT	14
21	Z-6ATS-021	HEATING ELEMENT CONNECTION	11
22	Z-6ATS-022	BOTTOM BOARD	1
23	Z-6ATS-023	SET SCREW FOR BOTTOM BOARD	4
24	Z-6ATS-024	SET SCREW FOR RUBBER FOOT	4
25	Z-6ATS-025	SET NUT FOR RUBBER FOOT	4
26	Z-6ATS-026	RUBBER FOOT	4
27	Z-6ATS-027	TRAY	1
28	Z-6ATS-028	SET SCREW FOR HEATING ELEMENT PLATE	2
29	Z-6ATS-029	HEATING ELEMENT PLATE	1
30	Z-6ATS-030	HEATING ELEMENT SEPARATED MESH	12