

688.160 SALAMANDER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-EB600-001	BACK BOARD	1
2	Z-EB600-002	CROSS HEAD SCREW	18
3	Z-EB600-003	CROSS HEAD SCREW	12
4	Z-EB600-004	CHAIN WHEEL (SMALL)	3
5	Z-EB600-005	BEARING BASE	4
6	Z-EB600-006	WHEEL SHAFT	1
7	Z-EB600-007	HEXAGONAL NUT	25
8	Z-EB600-008	FLAT WASHER	6
9	Z-EB600-009	SPRING WASHER	15
10	Z-EB600-010	GUIDE LEVER	2
11	Z-EB600-011	RUBBER WASHER	4
12	Z-EB600-012	RUBBER FOOT	4
13	Z-EB600-013	SLIDE BUSHING BRACKET (WITH HANGER)	2
14	Z-EB600-014	SLIDE BUSHING	4
15	Z-EB600-015	SLIDE BUSHING BRACKET (WITHOUT HANGER)	2
16	Z-EB600-016	COUNTERWEIGHT BLOCK	1
17	Z-EB600-017	HANGER	2
18	Z-EB600-018	BOLT	5
19	Z-EB600-019	CHAIN	3
20	Z-EB600-020	SUPPORTING SHAFT	1
21	Z-EB600-021	NUT	6
22	Z-EB600-022	SCREW	3
23	Z-EB600-023	CHAIN HOOKER	3
24	Z-EB600-024	HEXAGONAL BOLT	4
25	Z-EB600-025	SPRING WASHER	6
26	Z-EB600-026	FLAT WASHER	2
27	Z-EB600-027	TERMINAL BOARD	2
28	Z-EB600-028	TERMINAL	2
29	Z-EB600-029	CROSS HEAD SCREW	30
30	Z-EB600-030	CERAMIC BASE INSULATING BOARD	2
31	Z-EB600-031	AXLE PIN FOR BEARING	4
32	Z-EB600-032	HEXAGONAL NUT	16
33	Z-EB600-033	SPRING WASHER	7
34	Z-EB600-034	CROSS-HEAD SCREW	9
35	Z-EB600-035	PLAIN WASHER	1
36	Z-EB600-036	WIRE TERMINAL	9
37	Z-EB600-037	SPRING WASHER	6
38	Z-EB600-038	NUT	8
39	Z-EB600-039	RUNNER BAFFLE	2
40	Z-EB600-040	BEARING	4
41	Z-EB600-041	WIRE INLET TUBE	3
42	Z-EB600-042	NUT	20
43	Z-EB600-043	SPRING WASHER	28
44	Z-EB600-044	WIRE CLIP	4
45	Z-EB600-045	JOINTING BOARD OF BEARING	2

688.160 SALAMANDER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
46	Z-EB600-046	BOLT	3
47	Z-EB600-047	NUT	6
48	Z-EB600-048	ELASTIC CIRCLIP OF SHAFT	2
49	Z-EB600-049	SHAFT FOR WHEEL	1
50	Z-EB600-050	BEARING	4
51	Z-EB600-051	POWER CORD	1
52	Z-EB600-052	POWER CORD JACKET	1
53	Z-EB600-053	EQUIPOTENTIAL NUT	1
54	Z-EB600-054	EQUIPOTENTIAL WASHER	4
55	Z-EB600-055	HEXAGONAL NUT	2
56	Z-EB600-056	INSULATION	1
57	Z-EB600-057	WIRE TERMINAL	8
58	Z-EB600-058	INSULARION PRESSER BOARD (1)	1
59	Z-EB600-059	INSULATION PRESSER BOARD (2)	1
60	Z-EB600-060	NUT	12
61	Z-EB600-061	TERMINAL	1
62	Z-EB600-062	HEXAGONAL BOLT	4
63	Z-EB600-063	RUBBER FOOT	4
64	Z-EB600-064	BOTTOM BOARD	1
65	Z-EB600-065	CROSS HEADE SCREW	2
66	Z-EB600-066	THERMOSTAT	1
67	Z-EB600-067	HEATING INDICATOR	1
68	Z-EB600-068	POWER INDICATOR	1
69	Z-EB600-069	BOTTOM BOX	1
70	Z-EB600-070	REAR BOX	1
71	Z-EB600-071	FLAT WASHER	2
72	Z-EB600-072	CRUMB TRAY	1
73	Z-EB600-073	WIRING GRID	1
74	Z-EB600-074	TOP COVERING BOARD	1
75	Z-EB600-075	CROSS HEAD SCREW	6
76	Z-EB600-076	TOP INSULATION BOARD	1
77	Z-EB600-077	TOP BOX	1
78	Z-EB600-078	TERMINAL	2
79	Z-EB600-079	LIFT HANDLE	1
80	Z-EB600-080	HEXAGONAL NUT	2
81	Z-EB600-081	FRONT HEATING BAFFLE BOARD	1
82	Z-EB600-082	REAR HEATING BAFFLE BOARD	1
83	Z-EB600-083	HEATING ELEMENT CLIP	1
84	Z-EB600-084	HEATING ELEMENT	1
85	Z-EB600-085	NUT WITH FLAT WASHER	2
86	Z-EB600-086	SUPPORTING BAR OF HEATING ELEMENTS	1
87	Z-EB600-087	FORELOCK	2
88	Z-EB600-088	SCREW	1
89	Z-EB600-089	KNOB	1
90	Z-EB600-090	BEZEL	1