

BCMK

plastic dispenser



Using the BCMK

Use the BCMK plastic dispenser for measuring out all types of smooth cold sauces.



1. Knob
2. Alignment screw
3. Outflow
4. Pump casing

First use with a new pail/container of sauce:

1. Put the dispenser into a pail of hot water.
2. Push the knob down a few times to pump the hot water through the outflow.
3. Remove the dispenser from the pail and allow the water to run out of the dispenser.
4. Place the dispenser in a pail/container of sauce.
5. Push the knob down.
6. Hold a finger against the end of the outflow and wait for the knob to move up.
7. Repeat Steps 5 and 6 until the sauce comes out of the outflow.

Then:

1. Hold a small container under the outflow.
2. Push the knob down to pump a portion of sauce into the container.

Cleaning

Recommendation: clean the dispenser at least once a week and when changing the pail/container.

1. Take the dispenser out of the pail/container.
2. Rinse off any sauce residue under a hot tap.
3. Put the dispenser into a pail of hot water.
4. Push the knob down a few times to pump the hot water through the outflow.
5. Unscrew the dispenser from the cover:



6. Remove the cover from the dispenser:



7. Take the spring and the ball out of the pump casing.
Please note: take care not to lose the ball!



8. Unscrew the bottom of the pump casing




9. Place all parts into the dishwasher and switch on the dishwasher.

Assembling the dispenser

1. Screw the bottom onto the pump casing. **Please note:** make sure that the hole in the pump casing ends up at the top!



2. Place the ball in the pump casing.
3. Fit the spring into the pump casing. **Please note:** make sure that the eyelet of the spring ends up at the bottom!

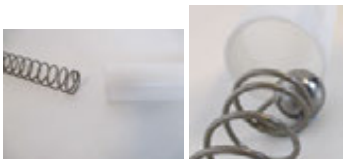

4. Screw the dispenser onto the cover:



Adjusting the portion size

The BCMK gives a standard portion each time you push the knob down. Reduce the portion as follows:

1. Remove the dispenser from the pail/container of sauce.
2. Rinse off any sauce residue with hot water.
3. Loosen the alignment screw under the knob with a screwdriver:



4. Slide the alignment screw down (to half-way down the rod or as far as necessary) and then tighten it.
5. Put the BCMK onto the pail. The movement that can be made with the dispenser is now smaller. The sauce portion coming out of the outflow is also smaller.


Troubleshooting

Problem	Solution
The movement made by the dispenser is smaller than normal.	The spring is faulty. Replace the spring.
The knob does not move back to top position immediately.	The spring is faulty. Replace the spring.
The sauce portions coming out of the outflow contains air bubbles.	The O-ring is worn. Replace the O-ring.
The sauce portions coming out of the outflow differ in volume.	The O-ring is worn. Replace the O-ring.
No sauce comes out of the outflow.	Check that the pump casing has been assembled correctly, with the vent hole in the pump casing at the top.



Check that the ball is in the pump casing.

Check that the spring is correctly positioned:

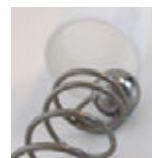

Spare parts

The following spare parts are available:

- Spare part set spring and O-ring (article number 90104002)
- Ball

Please contact Bereila if you need any spare parts.

Replacing the O ring

1. Unscrew the dispenser from the cover.
2. Replace the O ring with a new one:



3. Lightly grease the O-ring (e.g. with some mayonnaise).
4. Screw the dispenser onto the cover.

Contact

Apparatenfabriek Bereila B.V.
Industrieweg 7a
NL-9781 AC Bedum
t.+31 50 30 12 297
info@bereila.nl
www.bereila.nl

A Member of the
ASEPT Group

